



**LT ANGLE
VERSION**

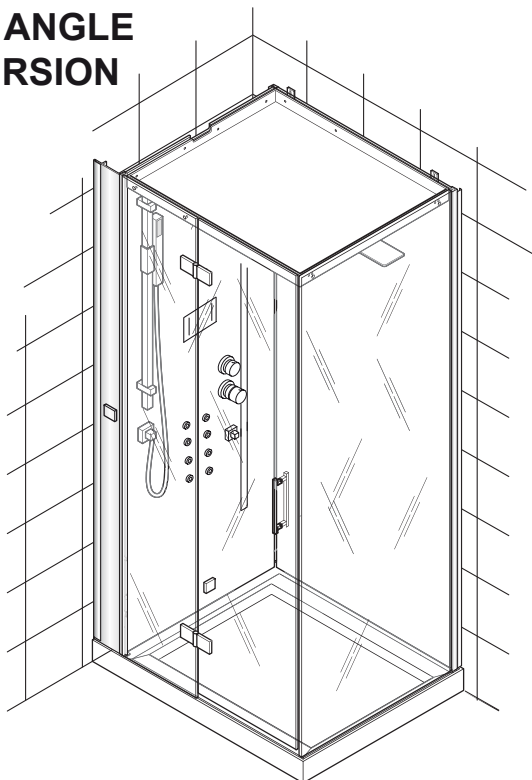

**RT ANGLE
VERSION**


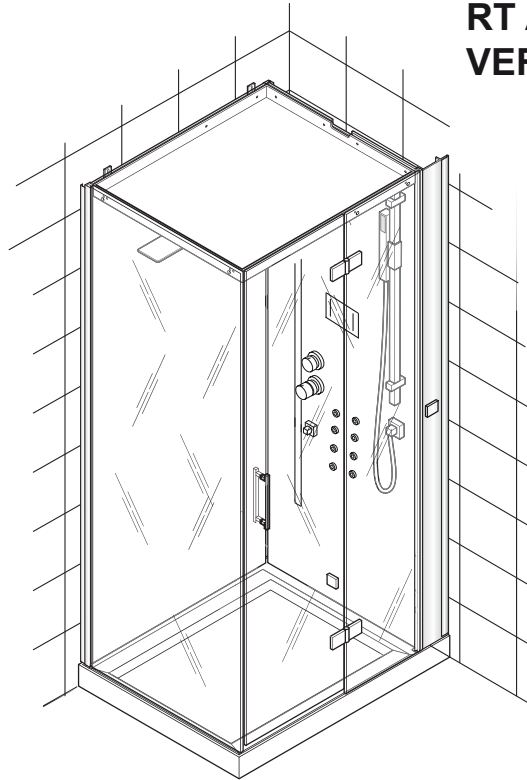


The minimum height of the wall tiles without protrusions is equal to the height of the stall.
On the walls there cannot be any greca or quarter round decorative patterns.


| SYSTEMS | Electrical characteristics | | | | Hydraulic characteristics | | | | | Overall dimensions | | | | |
|----------|----------------------------|-----|----|----|---------------------------|----------|-------|-------------|-----------|--------------------------|-------|--------|--------|-------|
| | Volt | A | Kw | Hz | max | working | water | connections | | stall package dimensions | | | weight | |
| | | | | | water | pressure | jets | H/C water | discharge | length | width | height | net | gross |
| TOP LINE | 230 | 9,1 | 2 | 50 | lt/min 20 | 1,5/4,5 | 8 | 1/2" | 40 | 219 | 73 | 114 | 120 | 150 |

The electrical characteristics should only to be considered in models with a Turkish bath.


The overall dimension values are expressed in centimetres. The actual dimensions may vary by ± 1 cm.

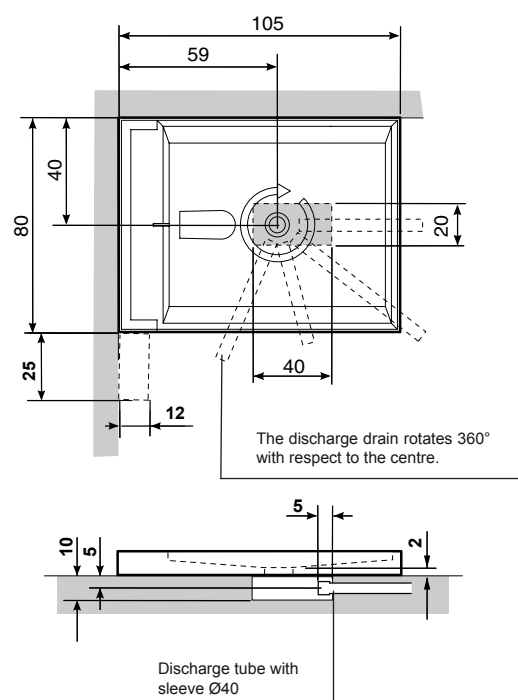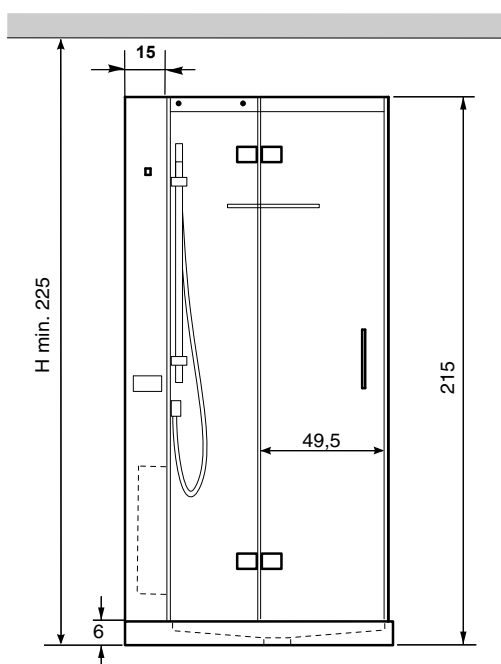

LT VERSION

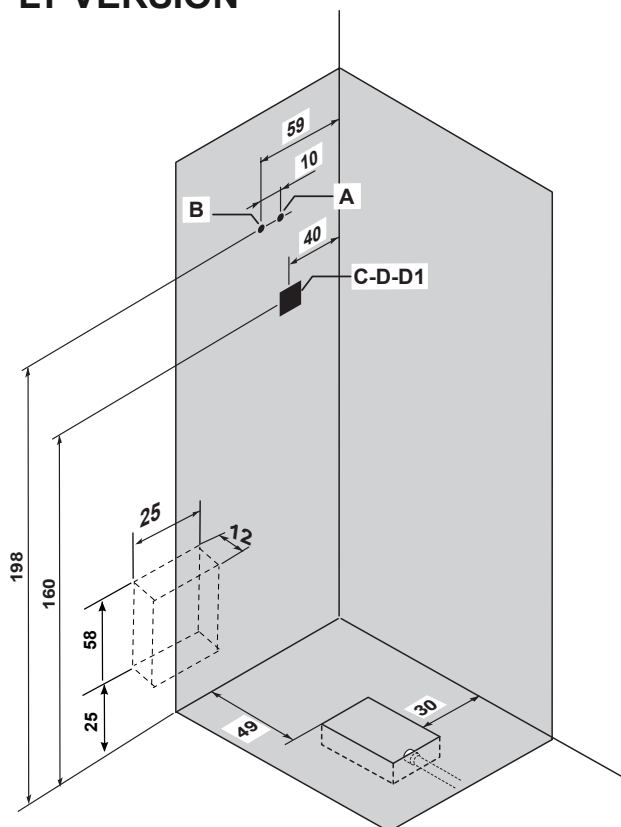

RT VERSION

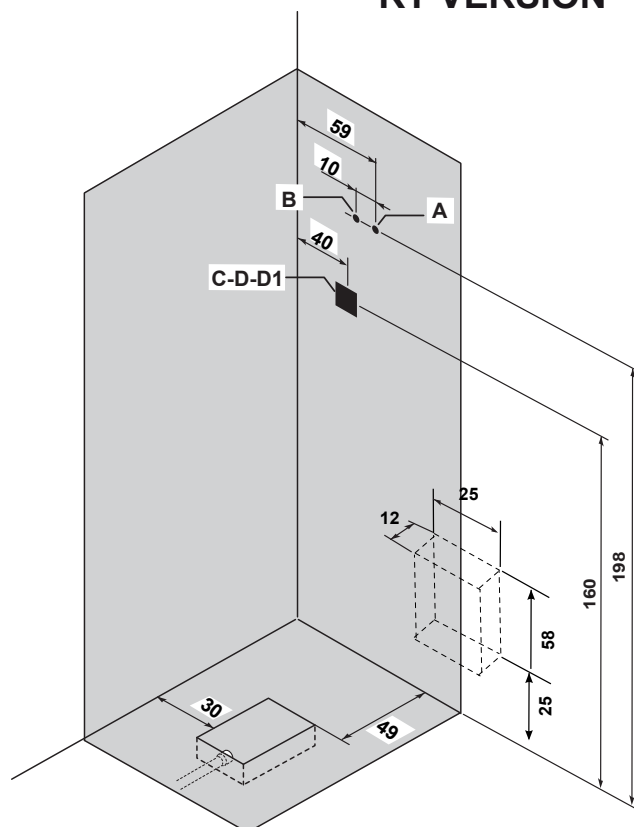

LEGEND

A - F cold water wall connection

B - F hot water wall connection

C-D-D1 electrical tube outlet

C - Power cable outlet (min. length 2 [m])

D - Equipotential cable outlet (min. length 2 [m])

D1 - Emergency cable outlet (minimum length 2 [m])

Connections C and D1 should only be considered in models with a Turkish bath.

The stall must be installed by personnel qualified in both electrical and hydraulic connections.

Before making the connections, the installer must verify that the electrical system is protected by a differential switch (0.03 A) and that the earthing system complies with regulations in force in the county of use.

The stall must be connected to the electrical system in a fixed manner (with a 3-pole H05 -3x2.5 mm² cable with 2.5 mm² diameter) using a bipolar switch (minimum contact opening 3 mm.) suitable to the power (KW) of the product to be connected and located outside zones 0,1,2,3 and far from any possible water sprays.

The product must also be connected to the building's equipotential system using the terminal located on the external frame. It is necessary that the stall be able to be moved at any time without having to damage the walls.

WARNING: if the conditions indicated are not observed, the safety of the stall may be compromised: in this case, the product guarantee and the manufacturer's responsibility for any direct or indirect damage caused by the product shall be void. When the guarantee is voided, for the above-mentioned reason, only parts recognised as being defective will be replaced and costs related to the labour necessary for product removal will not be covered.